Perforated Vehicle Decals Installation

Installing your rear window graphic is a simple and straightforward process that does not require any professional help. A set of instructions will be included with your order to assist you. You may also view the installation instructions below, download the installation instructions PDF, or view the installation instructions video.


Please Note: this is not a decal meant for wet install, so please do not use any water on the decal or window when installing.



Clean your car window, removing all dirt and grime from the surface. Allow the window to fully air dry before proceeding.



Lay out your decal on your vehicle's window with the backing still on and make sure it is aligned properly and that you've ordered the correct size.

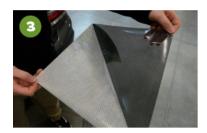

Pull the decal away from the window and remove the backing, exposing the black adhesive side of the decal. If the backing appears to be tearing when removing it, this may be because you are not removing all layers of the backing. When removing the backing, you should be able to see the back of the graphic, which is black.



Place the graphic back onto your vehicle's window, making sure it is aligned with the markings made previously. Begin to apply to the window, using a squeegee* or flat edge. Start from the center of the graphic and work your way towards the outer corners.

*Available for purchase with your rear window decal



Once you have applied the entire decal to your window, remove the excess material around the edges using a razor blade. Be sure to use caution when doing this to avoid damaging your vehicle's window or paint.

